



How to use Web-Client via Internet

- Type the address www.j2kip.com/webclient in the address bar on Windows.
- Then, you will see the screen DVR Web Viewer below.

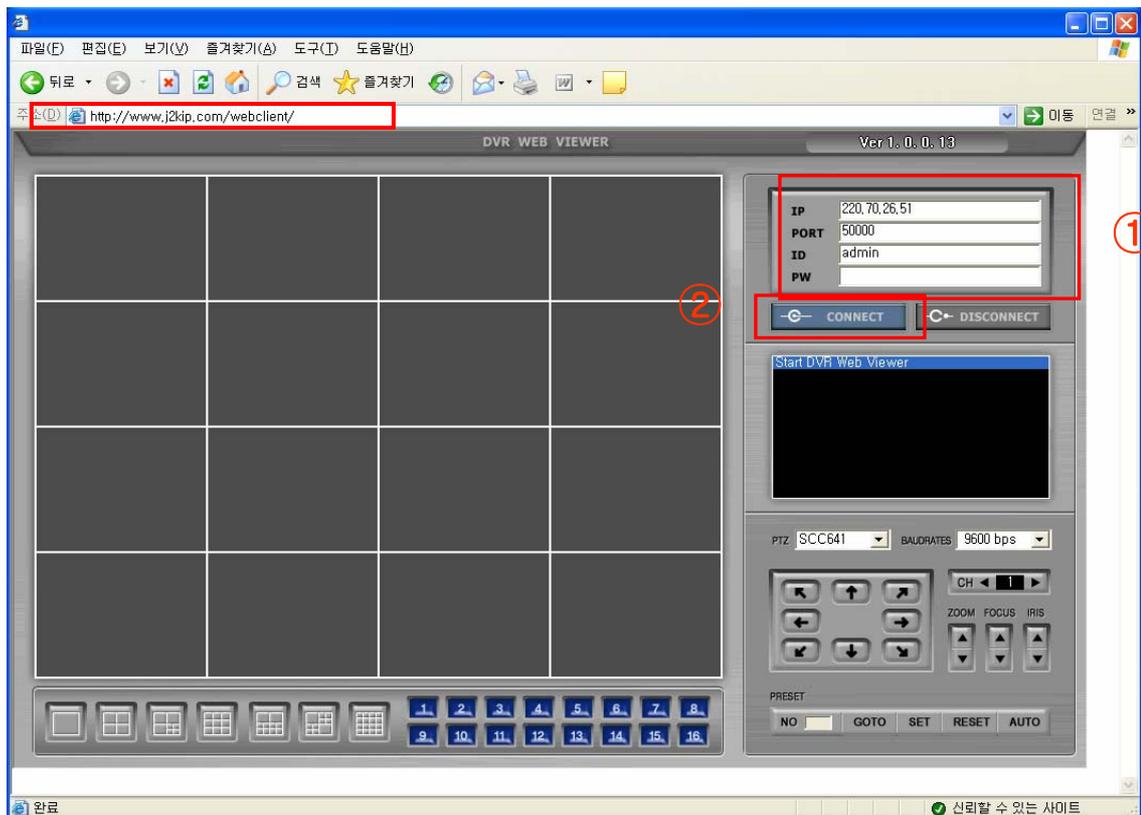


1. Type your 'IP, PORT, ID and Pass Word' in this box.

2. Click 'CONNECT'.

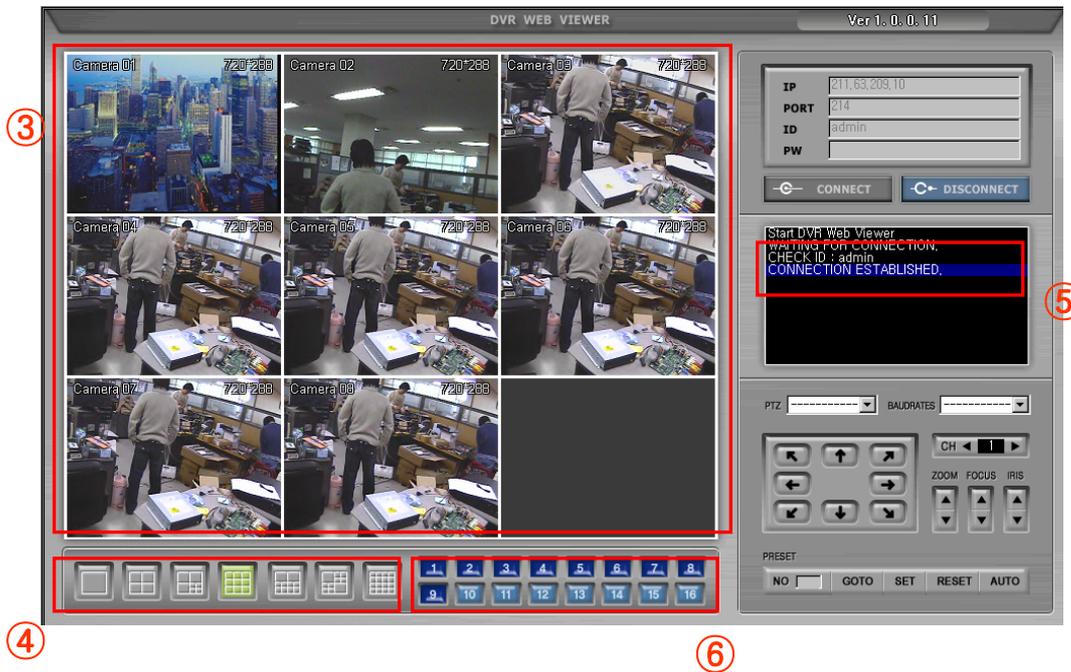

3. Now you can see images on the screen
4. Choose the display division
5. Check out the connection status. (Connection Established)
6. Channels being shown currently. (In dark blue color)

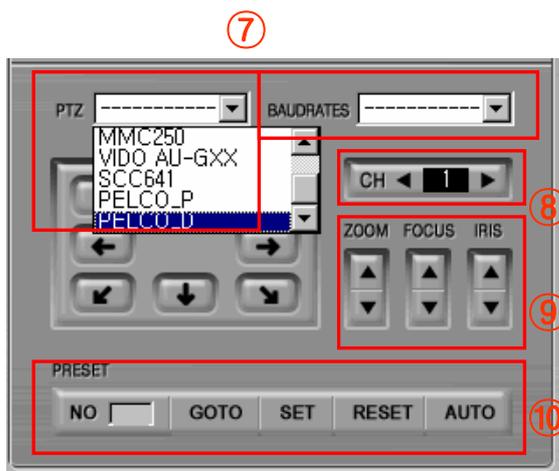

7. Select PTZ protocol and Baud rates.
8. Select PTZ camera channel.
9. Zoom, Focus, Iris Function for the PTZ camera selected.
10. PTZ camera Preset set up function (Press 'SET' button to set up and select the area that PTZ camera goes back to. Press 'GOTO' to go to the previous area that PTZ was showing.)